


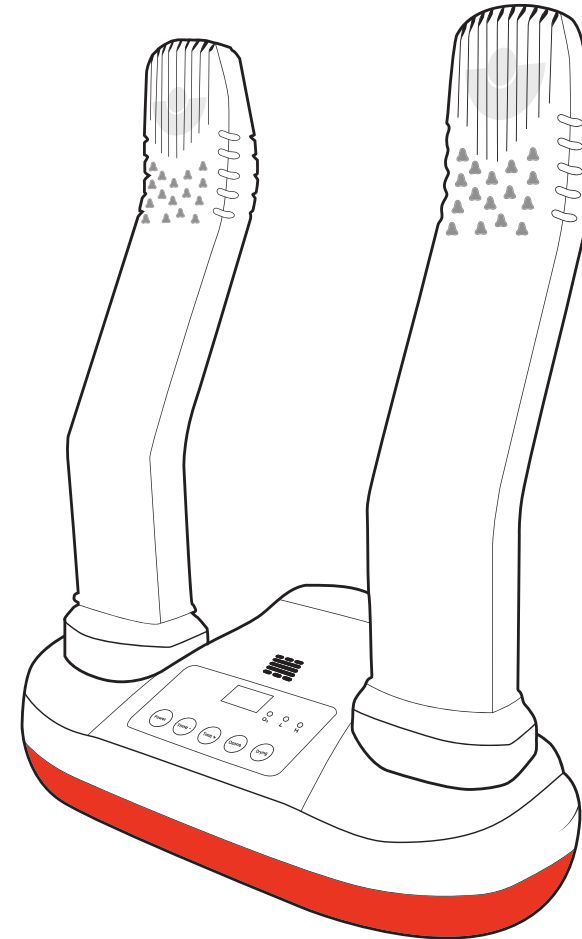

**SAVE
OUR
SOLES**



**UK
CA**


Save Our Soles
PO Box 301
LEWES
BN7 9PS



ATACAMA

ATACAMA DRYER

1. Unpack all parts and check for damage that may have occurred during shipping. If damage has occurred, notify immediately. Lay out all parts. Remove all cardboard and packaging immediately. Wet or damp packaging may damage contents.
2. Before operating this dryer, please read these instructions and retain them for future reference.

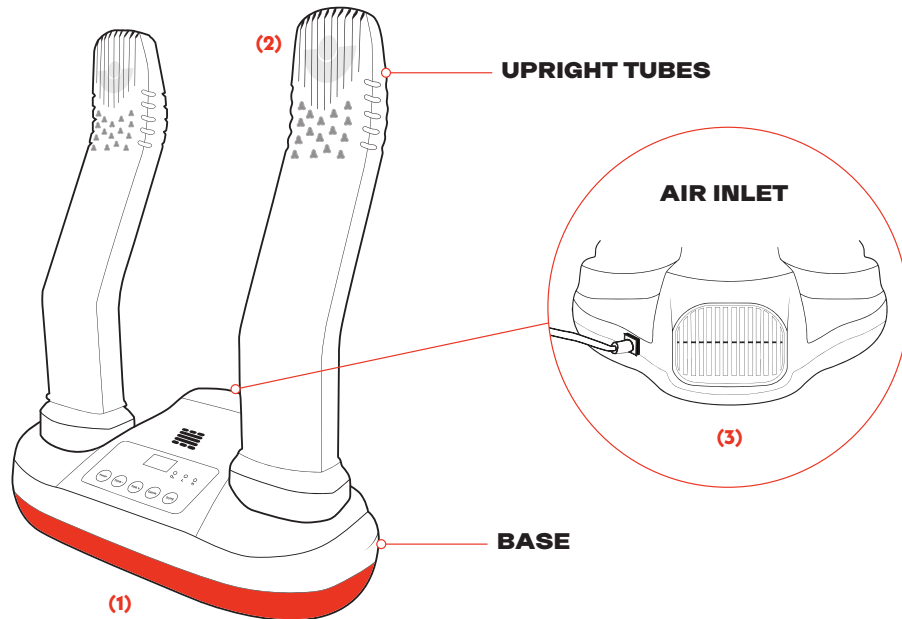


3. WARNING

- Do not use the dryer in the immediate vicinity of water, such as bathtubs, showers, wash basins or swimming pools etc.
- Never immerse the dryer into water or other liquids. If it has been in any contact with water - unplug immediately.
- Plug the dryer only into a standard household (220V-240V) outlet.
- Do not cover the dryer and the air inlet (3).
- Be sure air can blow freely into and out of grilles.
- After use and before cleaning, always switch off and unplug the dryer.
- Do not permit children to use or handle the dryer without proper supervision.
- If any damage on the supply cord, display screen, or the cover case, stop using it immediately. It must be repaired by the manufacturer, a service agent, or a similarly qualified person in order to avoid a hazard.
- The dryer is for indoor use only.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock or fire, or damage the dryer.

ASSEMBLY

4. 4.1 Insert upright tubes(2) into base(1).

OPERATION

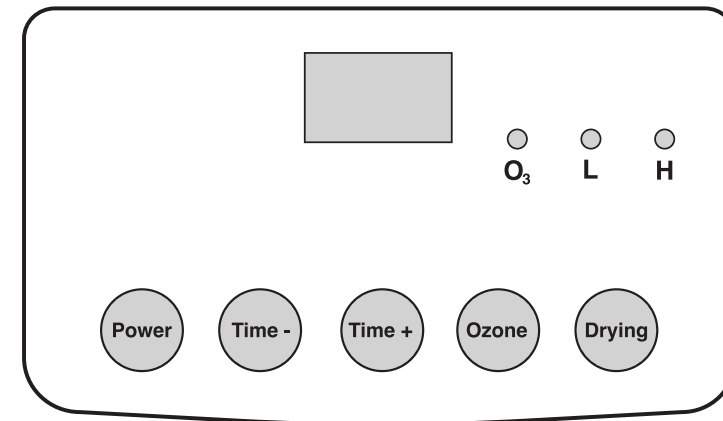

5. 5.1. Plug in. Press "Power" and the "Time" on the display indicates that the dryer is on. The default time setting is 200 minutes. It initially starts with "Drying". The "H" light indicates that the dryer is operating at the high temperature required for drying. For the "Ozone" setting, press "Ozone", and the O₃ light will show in green. In order to optimize the sterilization effect, only cool air circulates during the Ozone working time, because warm air will weaken the sterilization effect.
- 5.2. Set the desired time. Press "TIME+" or "TIME-" to add or subtract time by 10 min. increments. The screen countdown time changes every minute. Time range is 0-270 minutes.
- 5.3. During the DRYING working period, press "DRYING" to switch between "H" high temperature and "L" low temperature.
- 5.4. If the environmental temperature is 25°C or higher, or there is poor air circulation around the item to be dried, it is recommended to set the dryer to "L" for low temperature for better results.
- 5.5. During the DRYING working period, press "Ozone", OZONE indicator is ON, ozone cycle begins, warm wind stops and cool wind starts blowing. After 10 mins of OZONE working, it continues with the previous drying mode.
- 5.6. Press "Power" to stop the device, then unplug it.